



Set-up Guide Line For Bristol

Springs		Caster	Camber	
LF	RF			47% Rear
1000	1400	RF 3 Positive	RF 6 Negative	56% Left
		LF 1 Positive	LF 4 Positive	
LR	RR			58% Cross
400	300			3.25 Gear